

## Battery less Multi-turn Absolute Encoder

### Hollow shaft type    **Model : 38HA-MS**


#### ■ Features

- 39-bits resolution: 16-bits energy harvesting multi-turn & 23-bits optical single-turn
- Built-in communication protocol (option): BiSS C mode, SSI mode & RS-485 half-duplex
- Overall encoder outer diameter  $\varnothing$ 38 mm and maximum height of 40 mm
- Supporting 1/4 inch, 6mm and 8mm diameter of the blind hollow shaft



#### ■ Model

### **38HA-MS01-□□□-200-00E**

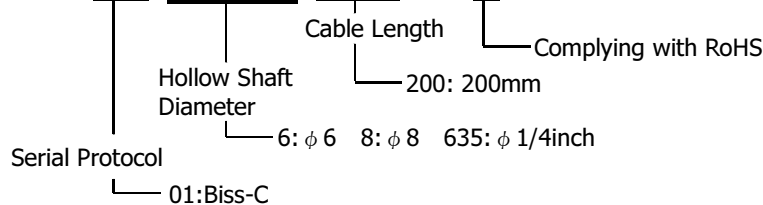

#### ■ Specification

##### 1. Basic specification

General		
Outside diameter	38mm	At housing
Height	40mm	
Bearing	With Bearing	
Shaft	Hollow shaft	
Shaft Diameter	1/4 inch, $\phi$ 6, $\phi$ 8	
Measuring Methods	Optical transparent / Absolute	
Electrical		
Single-turn Resolution	23bits (8,388,607 counts)	
Multi-turn Resolution	16bits (65,535 counts)	
Fault Status	8 bits	
CRC	8 bits	
DC Supply Voltage	5.0V $\pm$ 10%	
Main Supply Current	Typical 115mA	Without load, Ta=+25°C
Electrically Permissible Speed	$\leq$ 6,000min <sup>-1</sup>	
Output Communication	BiSS-C, SSI, RS-485 half duplex	
Output Code	Binary	

## 38HA-MS Series Datasheet

Mechanical		
System Accuracy	Typical $\pm 80$ Arc-sec	With electrical correction, Ta=+25°C
Mechanical Permissible Speed	$\leq 6,000 \text{ min}^{-1}$	
Shaft Radial Play	$\leq \pm 0.05 \text{ mm}$	
Shaft Axial Play	$\leq \pm 0.1 \text{ mm}$	
Environmental		
Operating Temperature Range	-20°C~105 °C	
Storage Temperature Range	-20°C ~105°C	
Vibration	$\leq 98 \text{ m/s}^2$ 10 to 2000Hz	Per IEC 60068-2-6
Shock	$\leq 1960 \text{ m/s}^2$ 6ms; Half Sine	Per IEC 60068-2-27
Protection	IP50	
Relative Air Humidity (Non-Condensing)	RH 90 %	Ta=+40°C
Others		
Counting Direction	Increase with Counter Clockwise (CCW) shaft rotation, view from coupling end (Figure 1)	
Initialization Time	500 ms	
Output Connection	Refer to cable connection information	Approximate 200mm (AWG28)

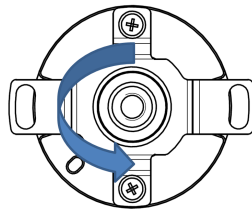


Figure 1

Note: 1. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

**Interface Diagram**

The following are examples of the circuit diagram of full-duplex and half-duplex transceiver.

Full-duplex transceiver (BiSS C mode / SSI mode protocol):

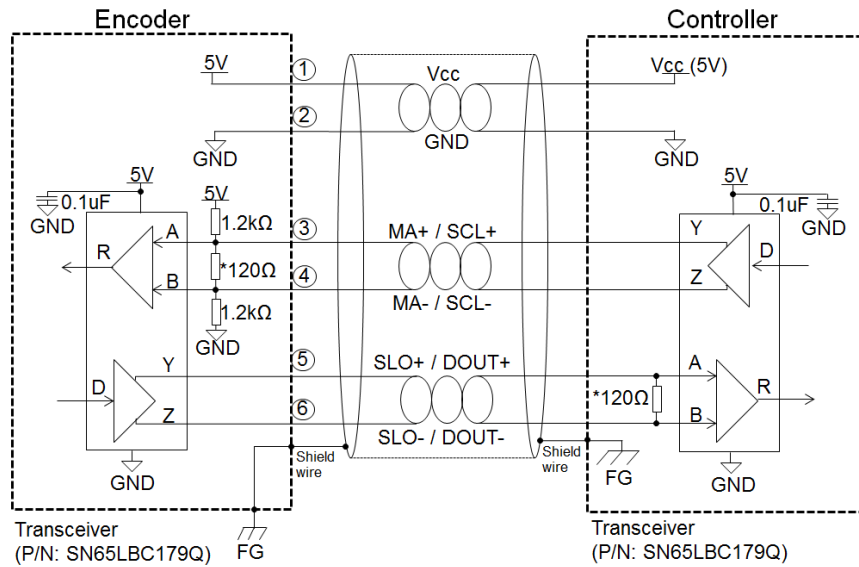


Figure 2: Circuit diagram of full-duplex transceiver

Half-duplex transceiver (RS-485 half-duplex protocol):

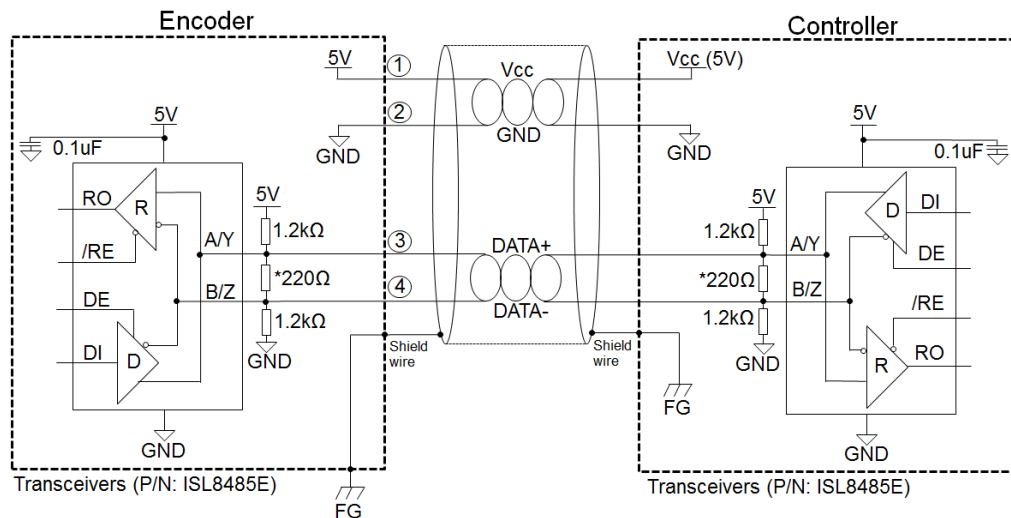


Figure 3: Circuit diagram of half-duplex transceiver

Note:

- 1) Termination resistor, \*120ohm and \*220ohm are recommended but may depends on the characteristic impedance of cable used.
- 2) Recommended to connect encoder chassis and cable shield to frame ground (FG) in application for enhanced noise immunity in harsh operating condition.

## 38HA-MS Series Datasheet


### ■ Cable Connection Information

No	Cable Color	BiSS C mode protocol (output: 7 core cable)	SSI mode protocol (output: 7 core cable)	RS-485 half-duplex protocol (output: 5 core cable)
1	RED	VCC, Positive Supply	VCC, Positive Supply	VCC, Positive Supply
2	BLACK	GND, Ground	GND, Ground	GND, Ground
3	BROWN	MA+	SCL+	DATA+
4	WHITE	MA-	SCL-	DATA-
5	ORANGE	SLO+	DOUT+	N/A
6	BLUE	SLO-	DOUT-	N/A
7	Cable Shield Strand	Cable Shield, Connect to Chassis	Cable Shield, Connect to Chassis	Cable Shield, Connect to Chassis


Note: Cable provided is 200mm +/- 10mm (included pigtail length) with AWG28.

### ■ Mechanical Drawing

#### Package Dimension

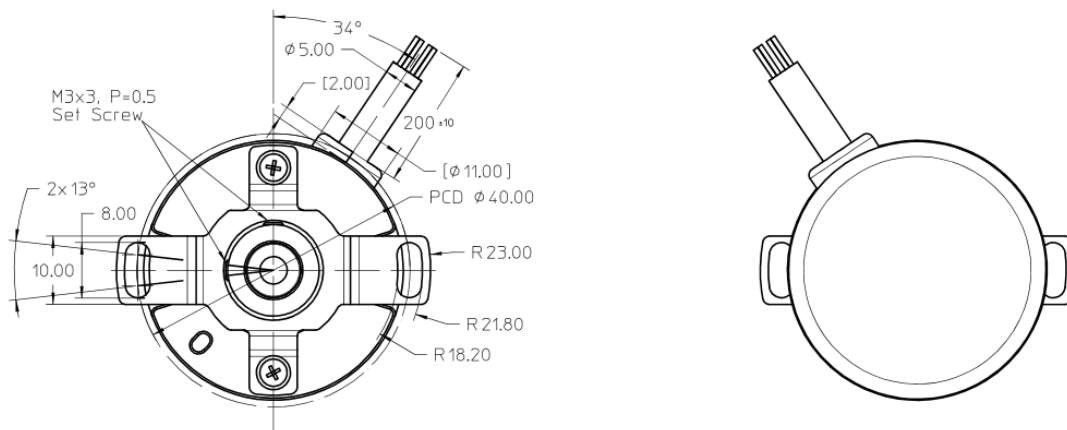

#### Recommended Shaft and Mounting Requirement

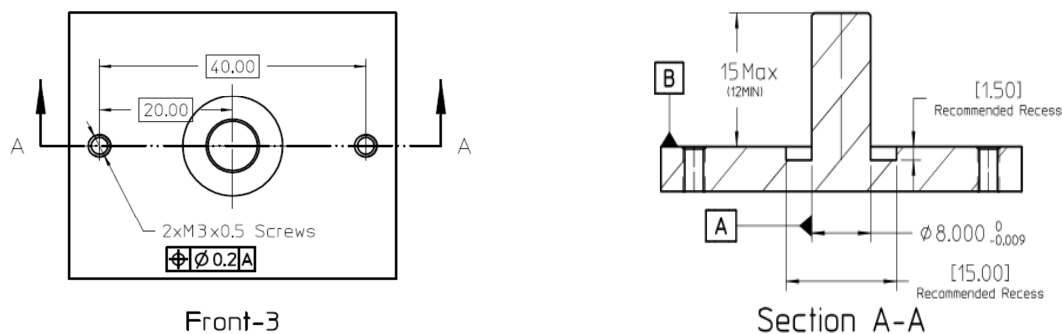

Note:

1. Dimensions are in millimeters
2. 3rd Angle Projection
3. Unless otherwise specified, all tolerances are within  $\pm 0.5$  mm
4. Recommended to have a recess on motor mounting surface to prevent encoder shaft interference with motor base.

## 38HA-MS Series Datasheet

### ■ Applications

- Robot and robotic engineering
- Factory automation
- Linear positioning system
- CNC machine tool
- Medical and lab equipment

### NOTE

Broadcom encoders are not recommended for use in safety critical applications. E.g. ABS braking systems, power steering, life support systems and critical care medical equipment. Please contact sales representative if more clarification is needed.

Headquarter Switzerland:  
Pewatron AG  
Thurgauerstrasse 66  
CH-8050 Zurich  
Phone +41 44 877 35 00  
info@pewatron.com

Office Germany:  
Pewatron Deutschland GmbH  
Edisonstraße 16  
D-85716 Unterschleißheim  
Phone +49 89 374 288 87-0  
info.de@pewatron.com



**PEWATRON**  
SENSORS · POWER SOLUTIONS

## We are here for you. Addresses and Contacts.

---

### Sales Germany & Austria

Postcode 00000 – 31999  
Postcode 38000 – 39999  
Postcode 80000 – 99999  
Austria

Kurt Stritzelberger

Phone +49 89 260 52 80  
Mobile +49 171 803 41 35

kurt.stritzelberger@pewatron.com

Postcode 32000 – 37999  
Postcode 40000 – 79999

Gerhard Vetter

Phone +49 674 394 75 75  
Mobile +49 163 762 74 30

gerhard.vetter@pewatron.com

**Geometrical sensors**  
**Sensor elements**

Thorsten Ravagni

Phone +49 60 479 53 627

thorsten.ravagni@pewatron.com

---

### Sales Switzerland & Liechtenstein

Postcode 3000 – 9999

Basil Frei

Phone +41 44 877 35 18  
Mobile +41 76 279 37 26

basil.frei@pewatron.com

Postcode 1000 – 2999

Christian Mohrenstecher

Mobile +41 76 444 57 93

christian.mohrenstecher@pewatron.com

### Sales International Key Accounts

Peter Felder

Phone +41 44 877 35 05  
Mobile +41 79 406 49 83

peter.felder@pewatron.com

---

### Sales Other Countries / Product Management

#### Pressure Sensors

Philipp Kistler  
Phone +41 44 877 35 03  
philipp.kistler@pewatron.com

#### Accelerometers / Level Flow sensor elements

Thorsten Ravagni  
Phone +49 60 479 53 627  
thorsten.ravagni@pewatron.com

#### Drive technology CH Postcode 5000 – 9999 / DE

Roman Homa  
Mobile +41 76 444 00 86  
roman.homa@pewatron.com

#### Gas sensors / Gas sensor modules Load cells

Dr. Thomas Clausen  
Phone +41 44 877 35 13  
thomas.clausen@pewatron.com

#### Power supplies

Sebastiano Leggio  
Phone +41 44 877 35 06  
sebastiano.leggio@pewatron.com

#### Drive technology CH Postcode 1000 – 4999 / AT / IT / FR

Christian Mohrenstecher  
Mobile +41 76 444 57 93  
christian.mohrenstecher@pewatron.com

#### Flow / Level / Medical products

Dr. Adriano Pittarelli  
Phone +49 8245 774 95 44  
adriano.pittarelli@pewatron.com

#### Linear position sensors Angle sensors

Eric Letsch  
Phone +41 44 877 35 14  
eric.letsch@pewatron.com

#### Current sensors Power solutions

Osman Coban  
Phone +49 71 635 363 898  
osman.coban@pewatron.com